

Figure 7. Measurement Illustrations Using the Probes.

### Using the Probe Stopper with the PRF-912B

The **PRF-922B** has side stoppers built into the probe to limit the applied electrode pressure. Though the **PRF-912B** doesn't have those stoppers built into the probe, the **PRF-900 STOP** fixture can be attached to the probe to limit the pressure as well.

The **PRF-900 STOP** fits snugly on the fixture's housing, surrounding the concentric ring pin assembly (**Figure 8**). This assists the user in obtaining repeatable measurements using consistent electrode pressure (**Figure 9**).



Figure 8. PRF-900 STOP on the PRF-912B.

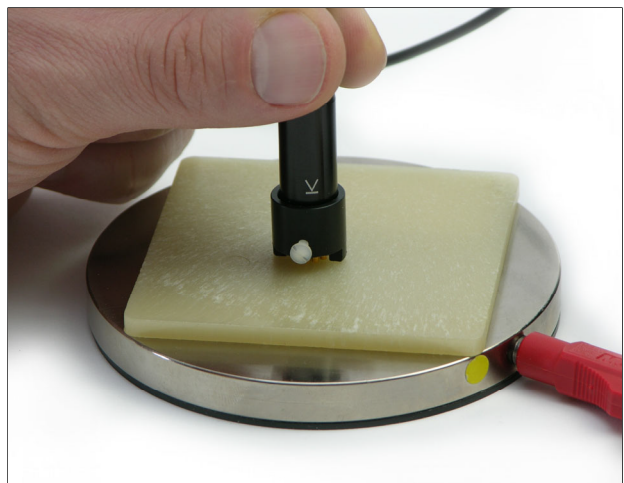


Figure 9. Prevents excess pressure to the electrodes.